


Download OVP-V23A program and open zip file. Password is: **oden2016**

OVP-V23A program installation help. If you have actuator that works with OVP12, OVP14 or OVP17,


You must connect your actuator with that program first, then download and install a new

Firmware HCF-220_02-095-PE1.ubl. After that you can use New OVP-V.23A software.


If problems, ask your local Oden actuator supplier or Oden Control AB, for help!

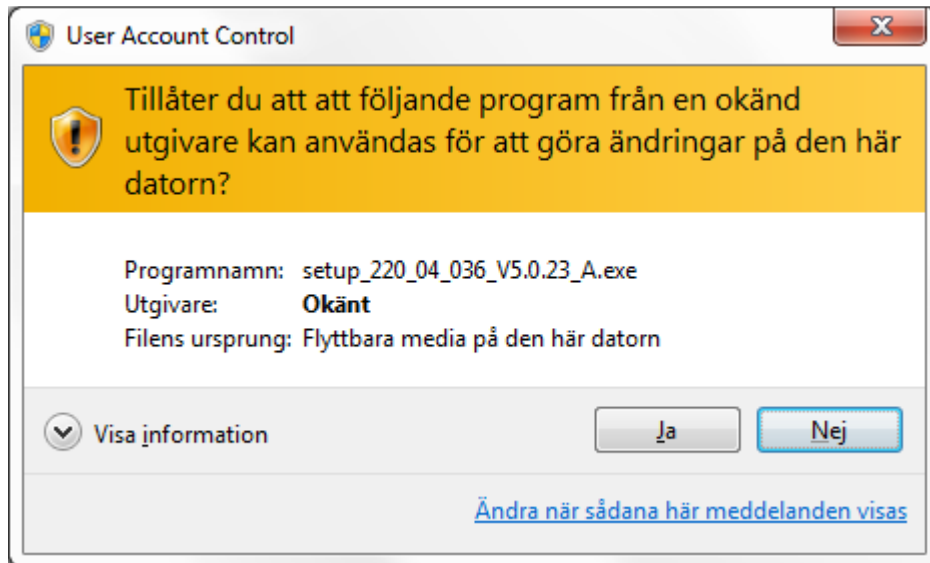


SELECT: YES

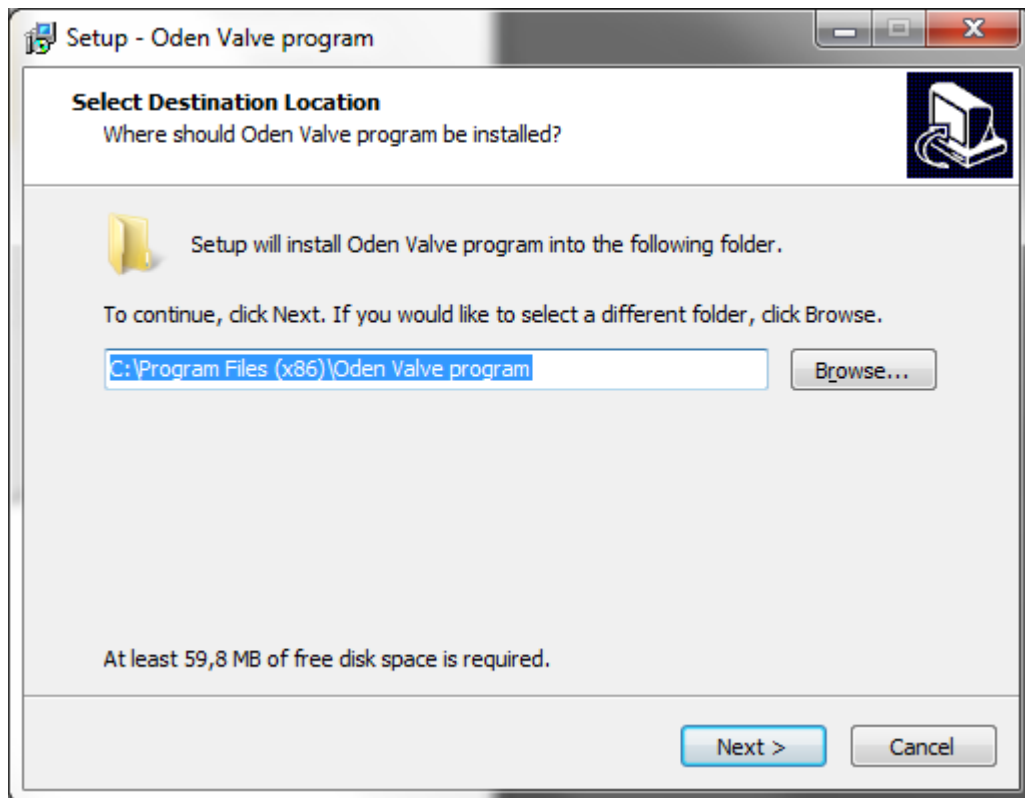


SELECT: NEXT

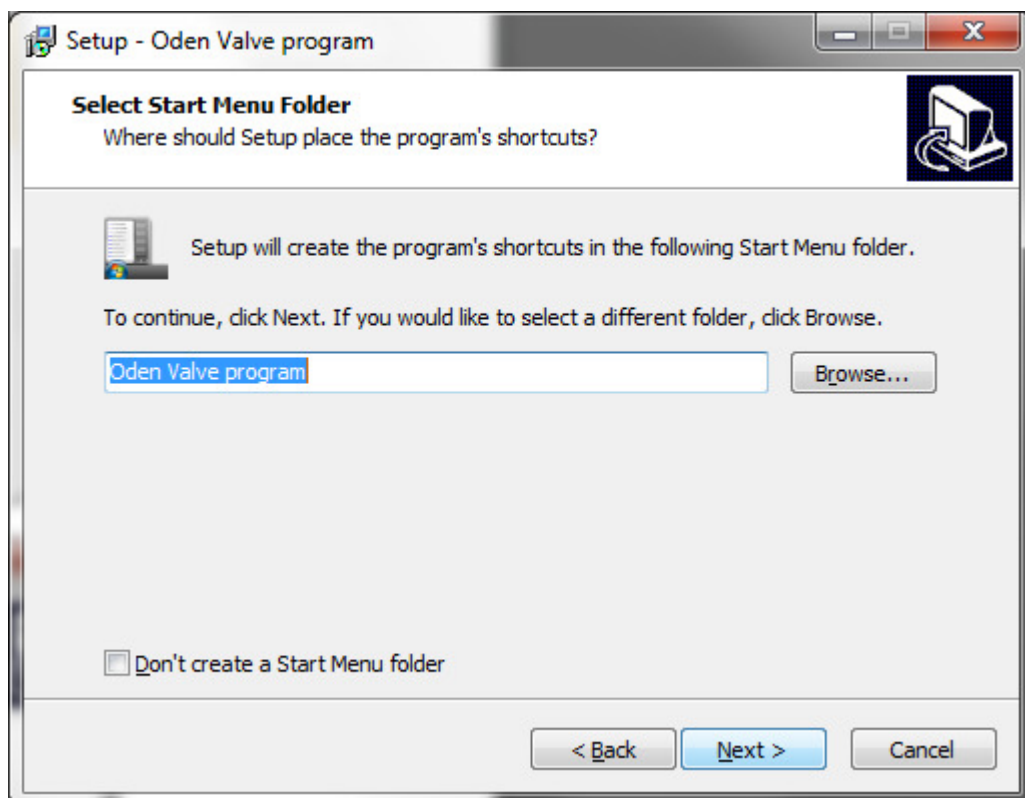


SELECT: NEXT

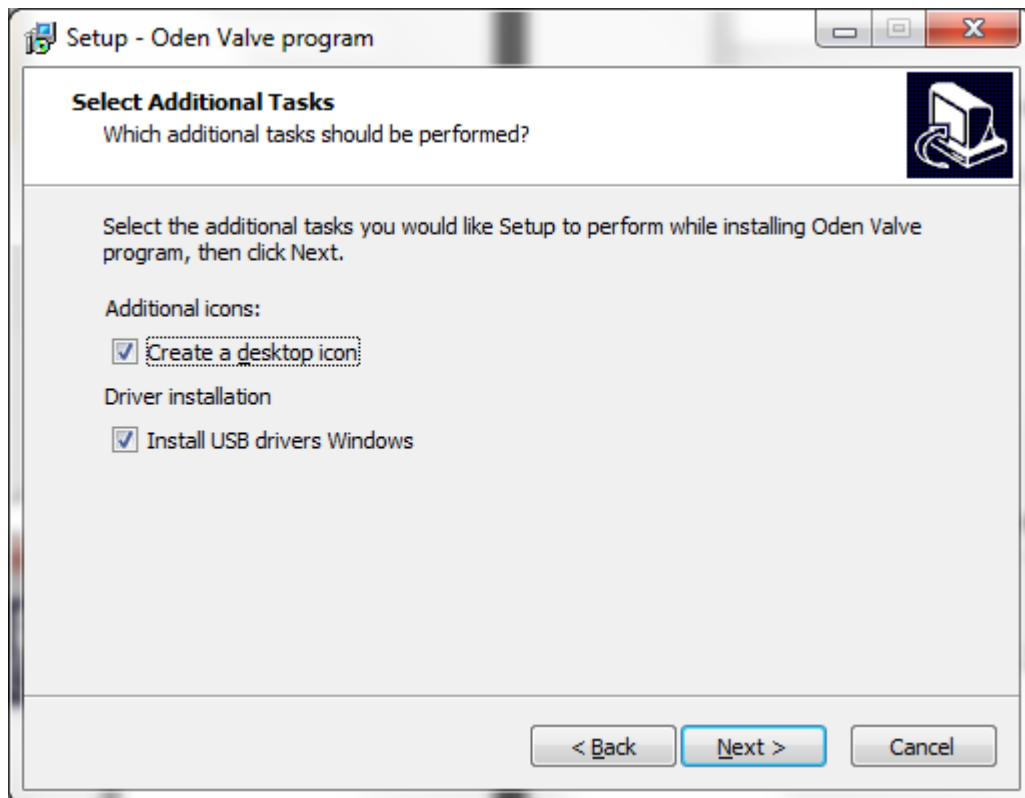


SELECT: NEXT If you have a previous version of the OVP program, rename it, so you do not open the wrong OVP version when you connect your computer to the actuators.

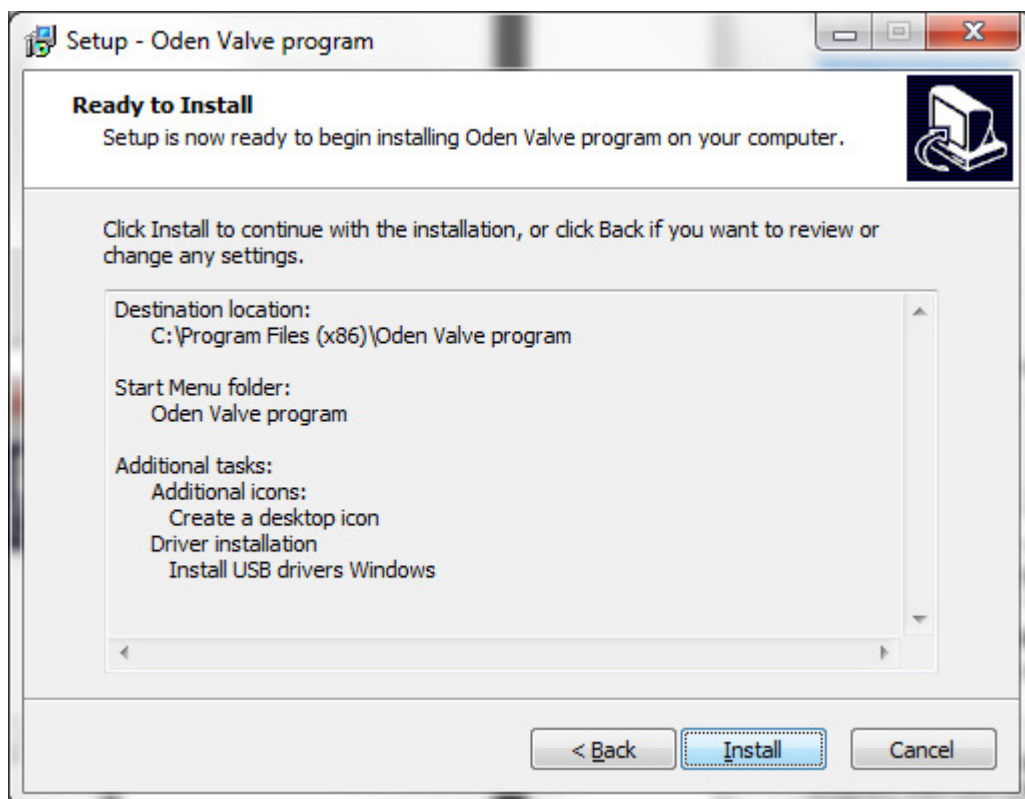


SELECT: INSTALL

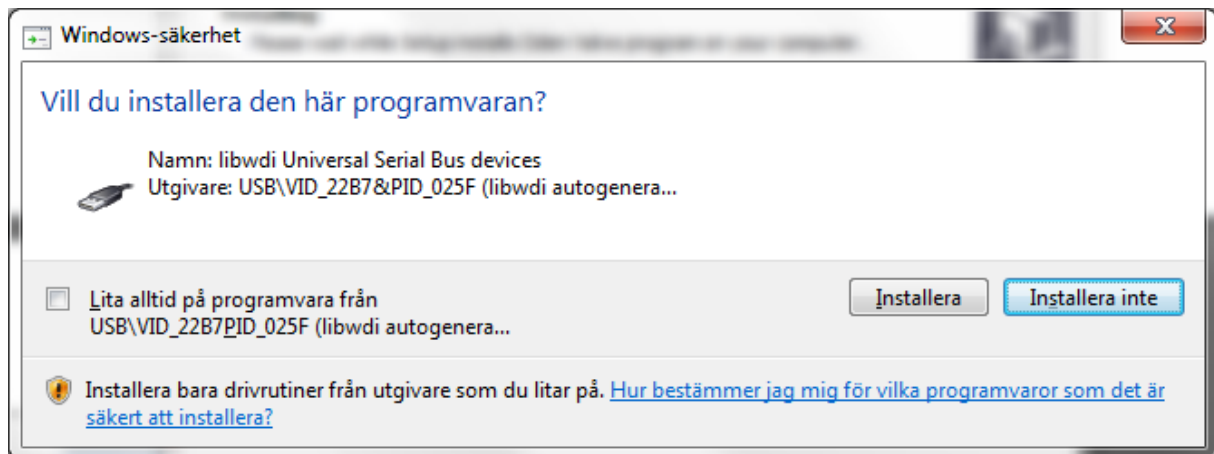

SELECT: INSTALL (performs installation of serial bus driver)

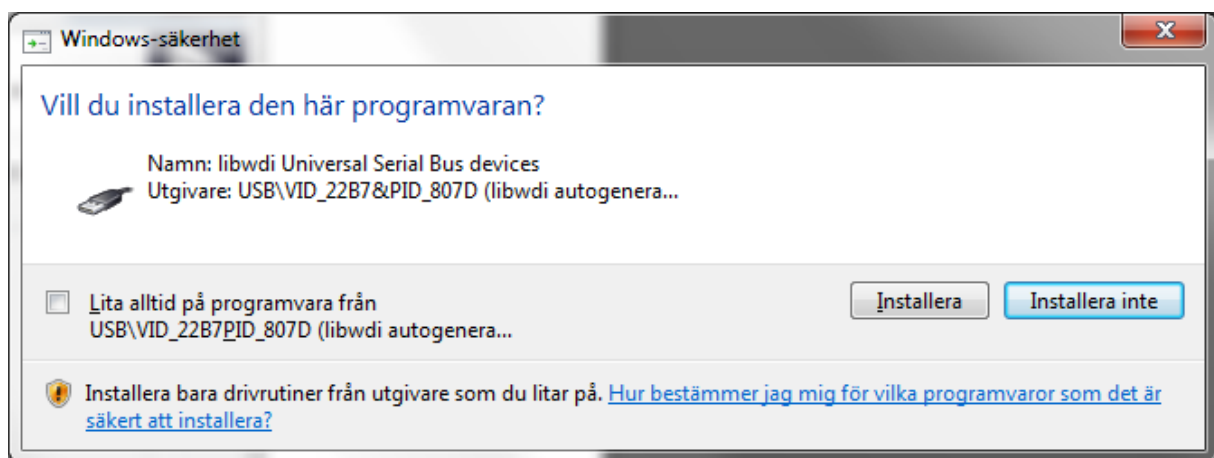

SELECT: INSTALL (performs installation of serial bus drivers)

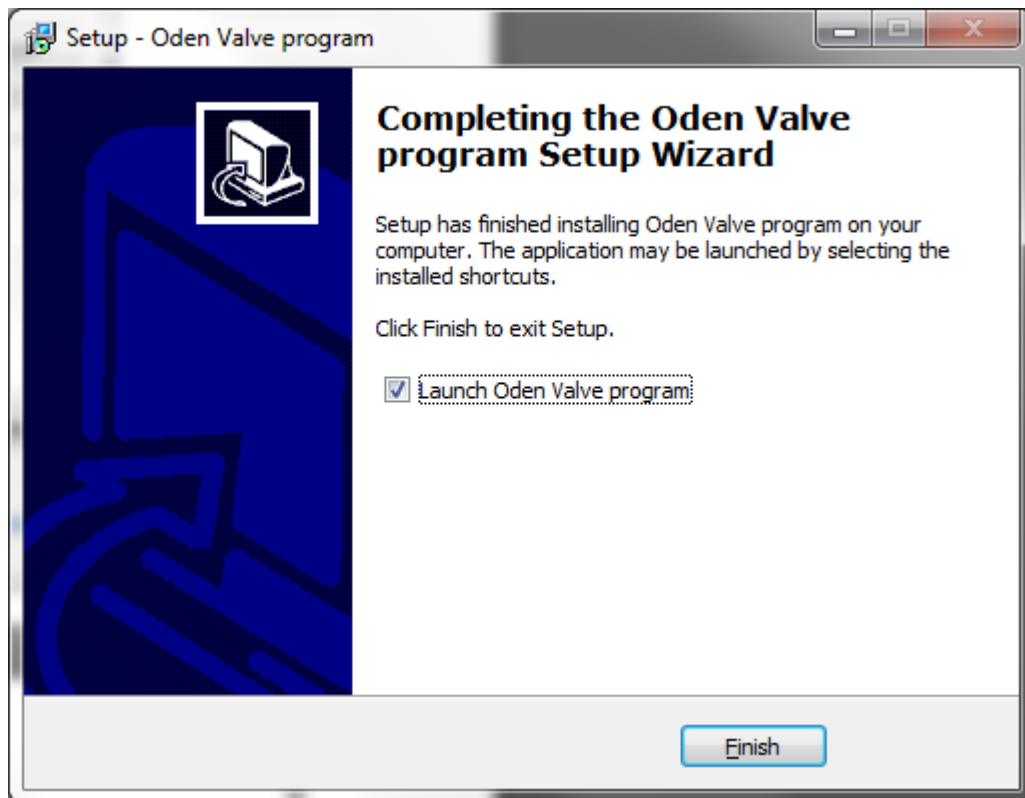

PRESS:FINISH