




SELECT: YES

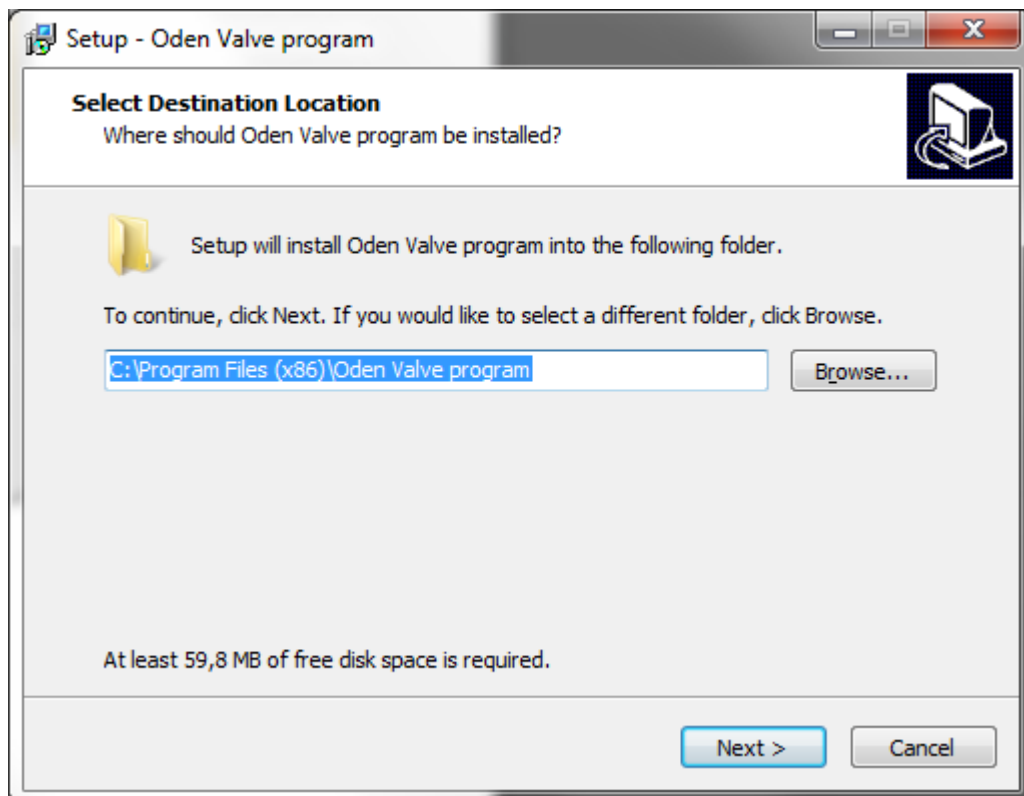


SELECT: NEXT

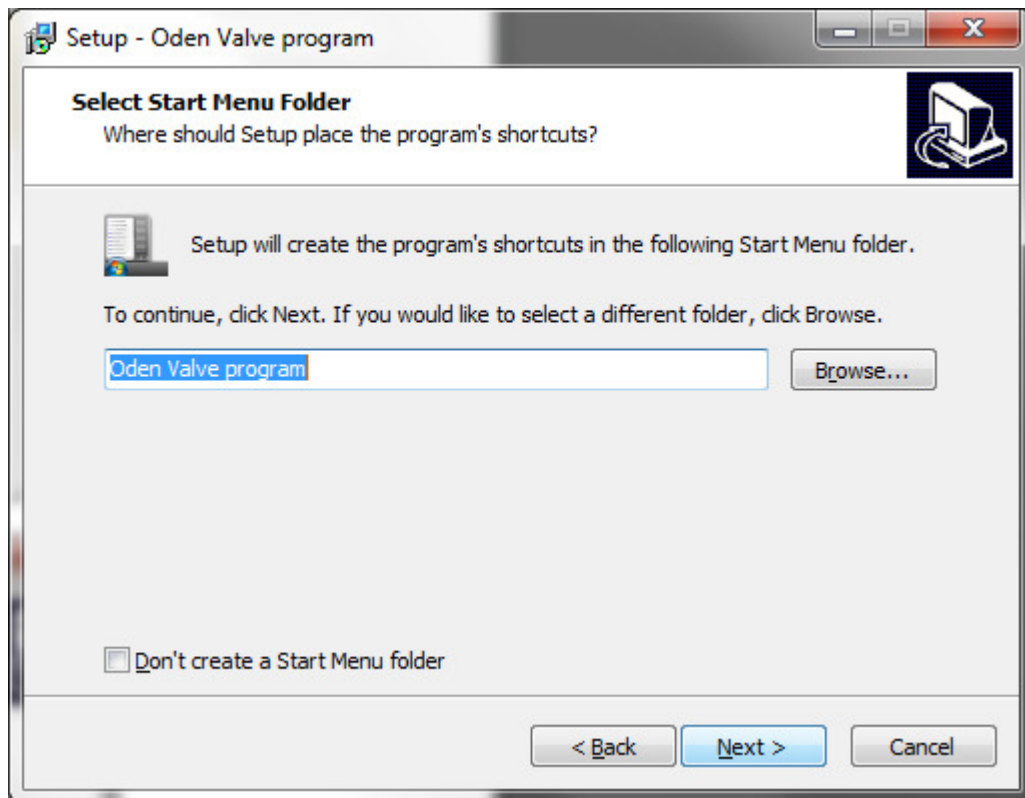


SELECT: NEXT

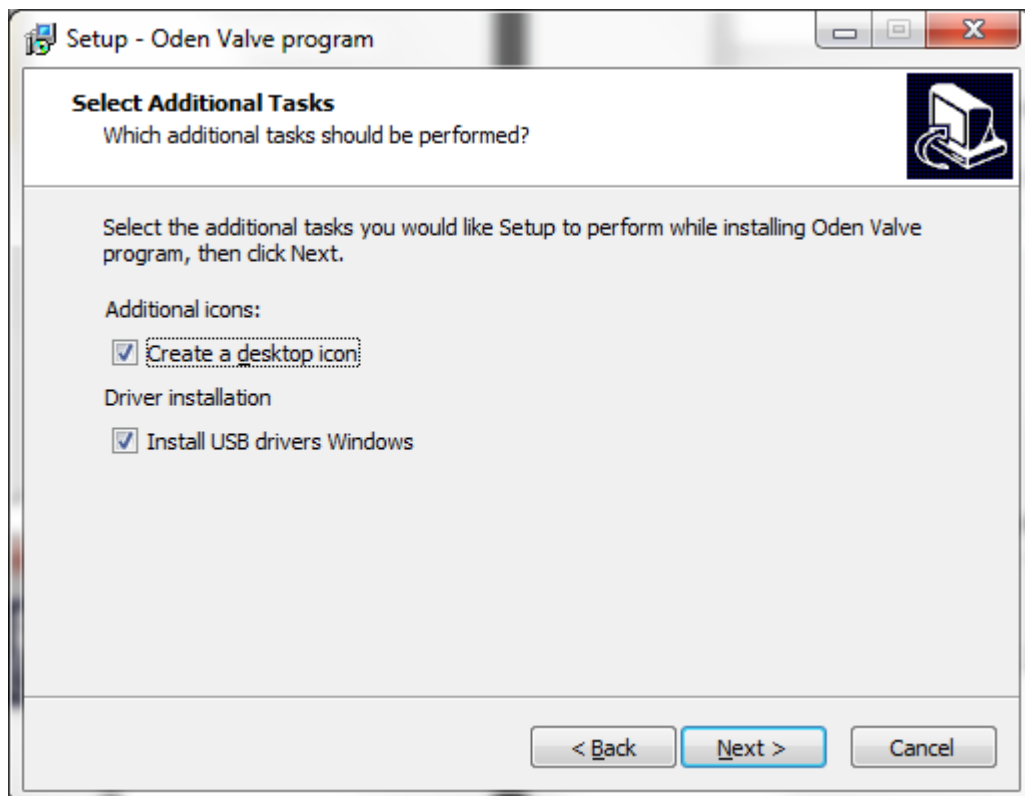

SELECT: NEXT If you have a previous version of the OVP program, rename it, so you do not open the wrong OVP version when you connect your computer to the actuators.

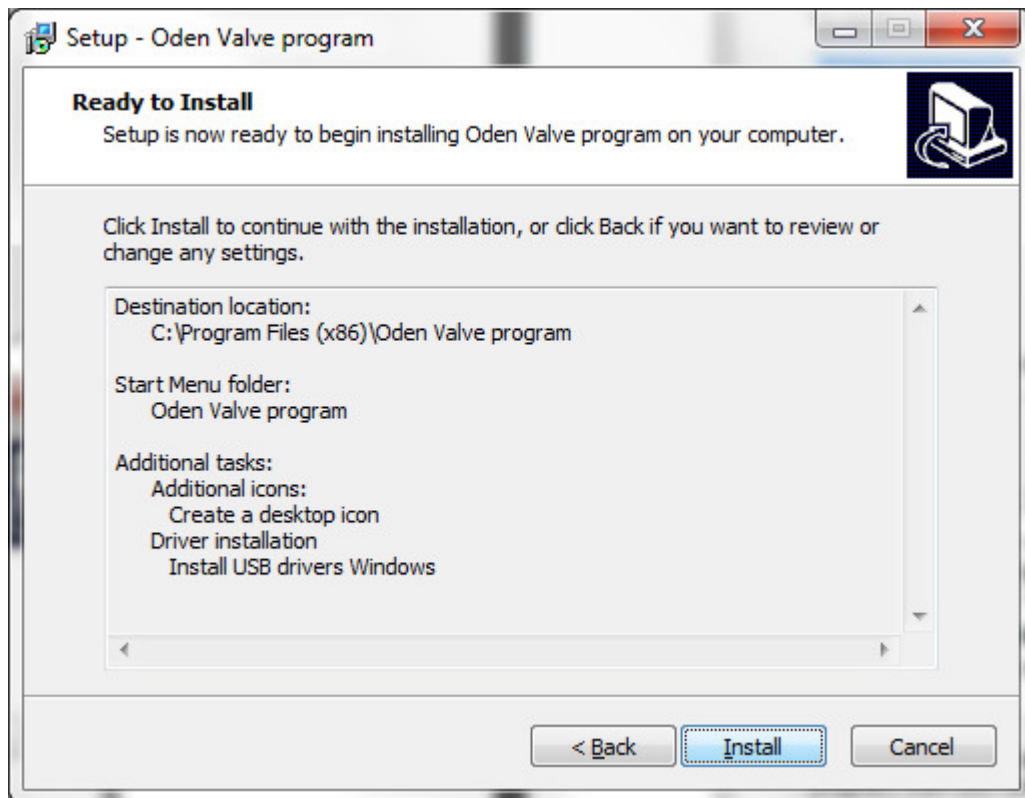


SELECT: INSTALL

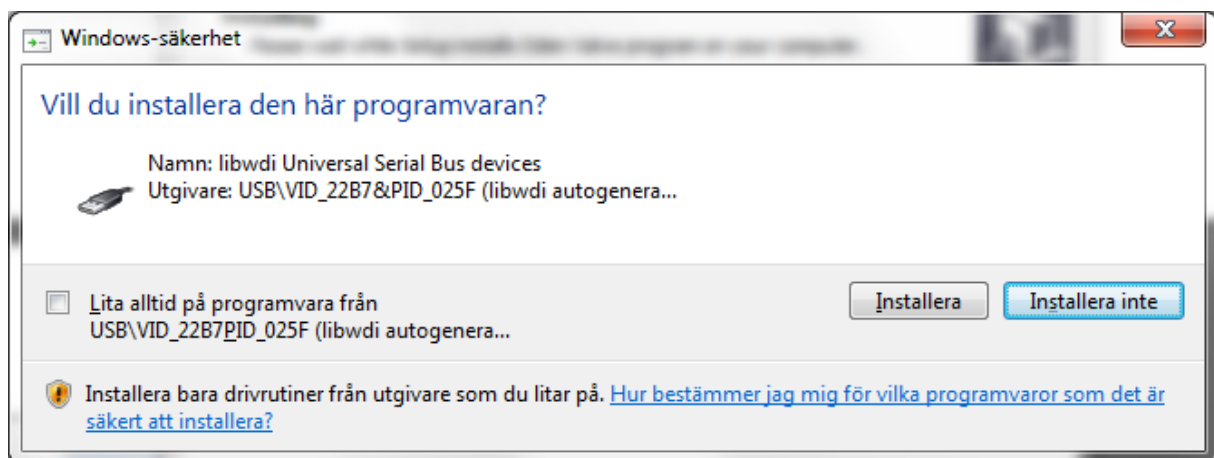


SELECT: INSTALL

(performs installation of serial bus driver)

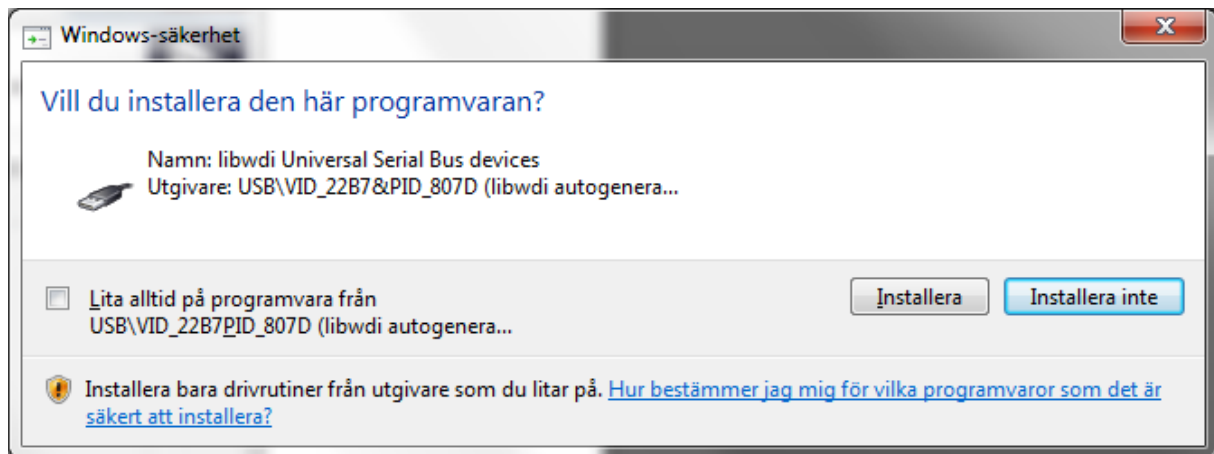

SELECT: INSTALL (performs installation of serial bus drivers)

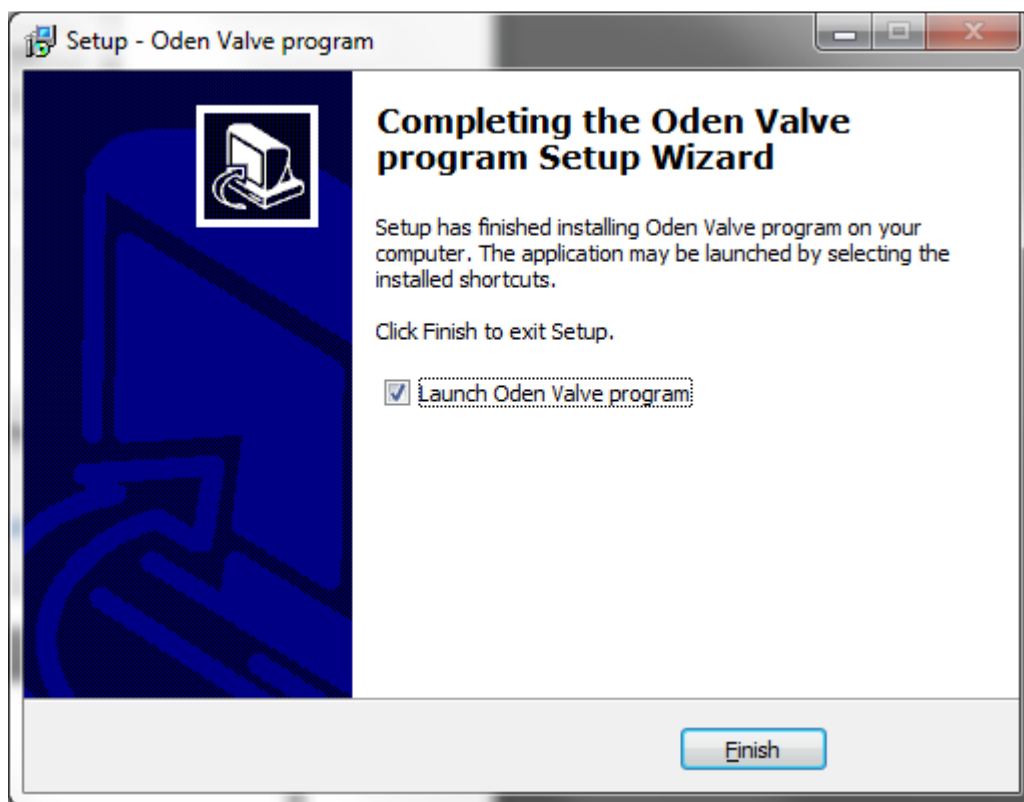

PRESS:FINISH